

CONSOLE VAULT

UNIQUE SECURITY SOLUTIONS

800-878-1369 **WWW.CONSOLEVAULT.COM**

MODEL #1034
2011 FORD F250/350
FULL FLOOR CONSOLE
INSTALLATION INSTRUCTIONS

- 1) Remove all contents from your factory console. Notice at the upper front and back of the console there are hangers that hold the tray that sits on top of the console. Those two hangers need to be removed.
- 2) Take the Console Vault lid assembly and put into position. See figure 1, 2 and 3. Once the lid assembly is in position hold in place.
- 3) Take the passenger side upright and put into position (see figure 4). Now take two of the nuts that came with your kit and mount the upright to the lid assembly.
- 4) Repeat step 3 for the driver's side upright.
- 5) Take the "X" bracket and put into position at the bottom of the uprights, see figure 5.
- 6) Using the 4 acorn nuts that came with your kit, mount the "X" bracket to the uprights. When doing this make sure that the uprights are fully pushed against the side walls of the console.
- 7) After the uprights and the "X" bracket are fully tighten in place, take the four "self-cutting" bolts and tread them into each of the "nut-serts" in the side walls of the uprights (see figure 6). Hand tread these bolts into place until they bottom-out against the plastic side wall of the factory console. Now using a socket wrench tighten these bolts, these bolts will cut their own holes.
- 8) Your installation is complete. Clean everything up and place the carpet back in the base.



Fig. 1



Fig. 2



Fig. 3



Fig. 4

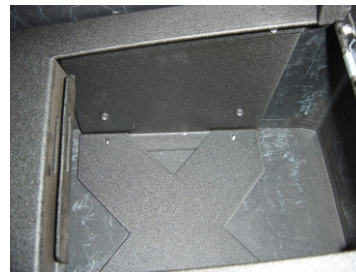


Fig. 5



Fig. 6