

# CONSOLE VAULT

UNIQUE SECURITY SOLUTIONS

800-878-1369 [www.consolevault.com](http://www.consolevault.com)



## Model #1038 2009 - 2014 Ford F150 (Full Floor Console with Shifter on Column) installation instructions

Tools required: 10mm Socket With Extension  
7/16" Socket

- 1) Remove all contents from your console. Figure one and two are for reference. Figure one show the parts list and figure two show an assembled vault. First start by taking the front upright (see fig. 3) and put into place. Now slide the front Upright forward into position (see fig.4)
- 2) Now take the lid assembly and put into position (see fig.5), next take the side up rights and place into position (see fig.6). Notice that each upright has a "bevel" front edge, this edge should be forward and towards the top on each side. Notice the lid assembly and the front up right have threaded studs and each side up right has a hole that line up with these studs.
- 3) Now finger tighten the 10mm flange nut into place on each upright. Firmly tighten these nuts using a 10mm socket.
- 4) Now notice on the "top rim" of the lid assembly there are three threaded fittings (two on the driver's side and one on the passenger side) take the 7/16 beveled edge bolts and finger tighten them into place. Now using a 7/16" socket tighten these bolt down. These bolts are designed to cut their own holes. Once these bolt are in place the installation is complete.



Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5



Fig. 6



Fig. 7

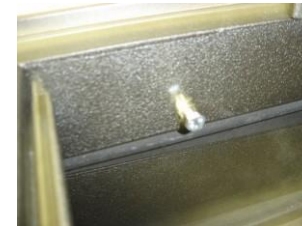


Fig. 8

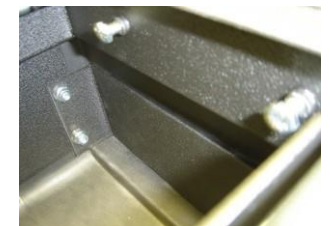


Fig. 9