



CONSOLE VAULT®
INNOVATIVE SECURITY SOLUTIONS

Model# 1039 2011-2019 Ford Explorer Installation Instructions

- 1) Remove all contents from your factory console.
Notice that the unit has a pivot point towards the back, push back of unit all the way in towards the front (see fig.1)
- 2) Open the lid of your Console Vault and place the front of your unit into the factory console (see fig. 2). The back of the unit will fall into place, once the unit is fully down in place, reach into the Console Vault and slide the back portion of the Console Vault into it's correct position (see fig. 3).
- 3) Take the 1.25" self cutting screws provided with the kit and thread them into each of the fittings on each side of the unit (see fig. 3). Only "finger tighten" them down at this time.
- 4) Using a 10mm socket start to turn and tighten the screws, start with the driver's side. These screws are designed to cut their own hole while turning. We will need to alternate tightening each screw, give driver's side screw a couple of turns and then repeat for the passenger side. Continue alternating on each screw until they are completely tighten down.
PLEASE NOTE: While tightening these screws the plastic of the factory console may want to push away and create a gap between the Console Vault and the factory console (see fig. 4). If this happens simply back-out both screws completely and repeat the previous step. Also you can apply inward pressure with your free hand on the outside of the factory console opposite the screw (see fig. 5)
- 5) Next put carpet liner in the bottom of unit and installation is complete



Figure 1

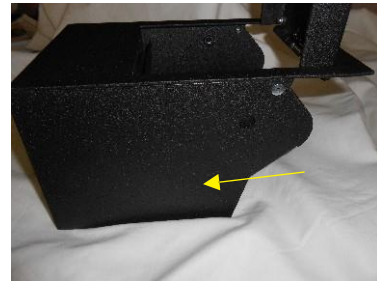


Figure 2



Figure 3

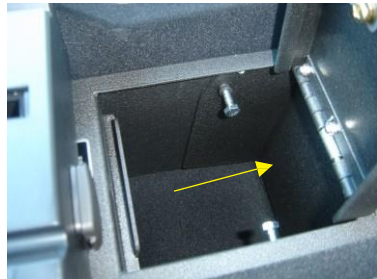


Figure 4



Figure 5

console vault, inc. www.consolevault.com

800-878-1369