



CONSOLE VAULT®
INNOVATIVE SECURITY SOLUTIONS

800-878-1369 www.consolevault.com

**2019+ Ford Ranger Rear
Seat In-Vehicle Safe
1091 Instruction Sheet**



Figure 1

- 1) Reset the combination lock before beginning the installation.
- 2) Removing factory storage tub: Gently pry up on each push-in retainer clip using an automotive panel tool (a screwdriver can be used, be careful not to scratch the surface). See figure 1. Place the tub aside and store for future removal of the safe.
- 3) Looking at figure 2 and 3, there are three threaded studs (A, B and C). Align these studs with their respective holes and slip the safe down into place.
- 4) From the hardware kit finger tighten the two nuts onto the two front threaded studs, points A & B. See figure 4. Please note; the threaded stud at position "C" is only an alignment hole and not a mounting hole. Tighten mounting nuts (A&B) using a socket wrench.
- 5) Next take the two "Tek-Screws" from the hardware kit and finger tighten them into each fitting on the passenger side of the safe, see figure 5.
- 6) Tighten each of the "Tek-Screws" using a socket wrench.
DO NOT OVER TIGHTEN, these screws are designed to cut their own hole while turning. Once the screw is fully seated, STOP. Over tightening will damage the fitting.



Figure 2

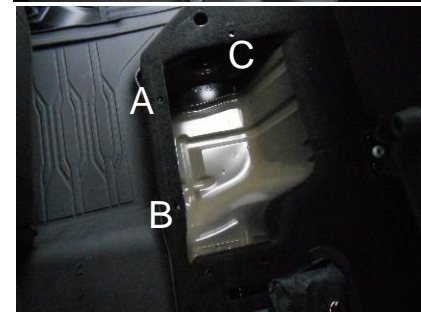


Figure 3



Figure 4



Figure 5