



CONSOLE VAULT®

THE ORIGINAL IN-VEHICLE SAFE™

800-878-1369

www.consolevault.com

Transporter Safe Instruction Sheet (2002)



Components included with your safe:

1. Pluck Foam Pad - Qty 1
2. Thumb Nut - Qty 1
3. Steel Cable - Qty 1



Securing the Safe with the Cable:

- 1) Turn the lock to unlatch the door.
- 2) Wrap the Cable around a secure location, take the end of the Cable with the two shaft collars and thread them through the loop at the opposite end (**Image 2-A**). Pull the Cable through the loop, then insert one shaft collar into the hole in the side of the safe (**Image 2-B**)
- 3) Close the door and engage the lock. This will close the shaft collar within the Safe and secure the Cable (**Image 3**)
- 4) The Safe is now secured to the chosen location.

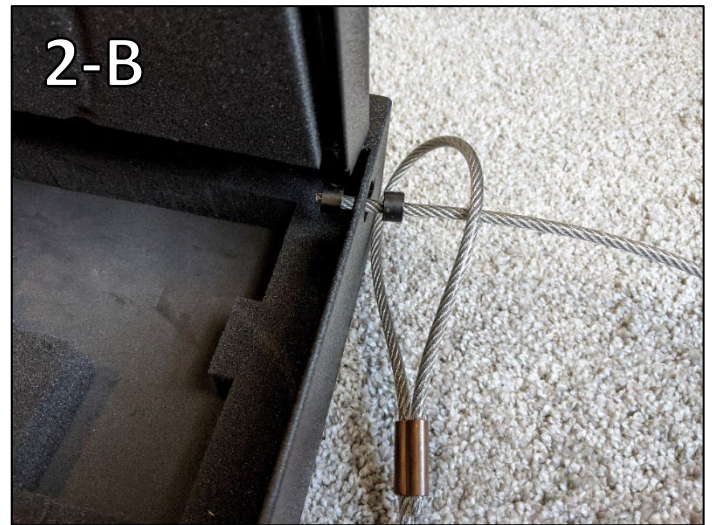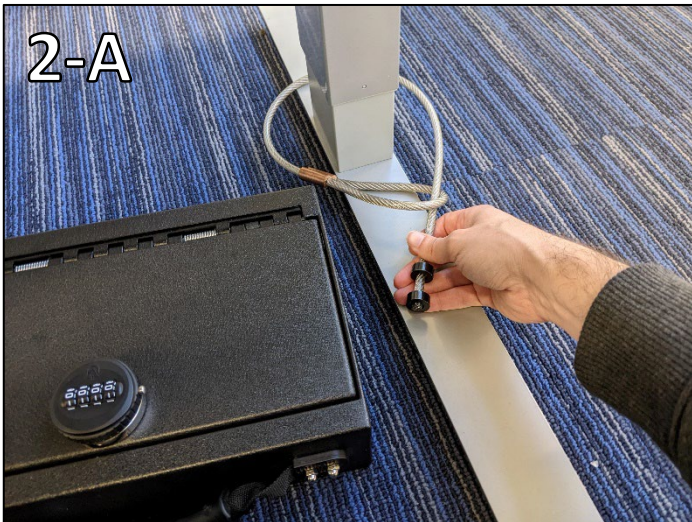



CONSOLE VAULT®

THE ORIGINAL IN-VEHICLE SAFE™

800-878-1369

www.consolevault.com

Transporter Safe Instruction Sheet (2002)

Components included with your safe:

1. Pluck Foam Pad - Qty 1
2. Thumb Nut - Qty 1
3. Steel Cable - Qty 1



Securing the Cable inside the Cable Cover:

- 1) Turn the lock to unlatch the door.
- 2) Unfasten the Thumb Nut from the inside of the Door; set aside the Thumb Nut for later. **(Image 2-A)** Lower the Cable Cover to reveal the storage space. **(Image 2-B)**
- 3) Fold the Cable similar to the shape demonstrated in **Image 3-A**. Tuck the Cable under the flanges in the Cable Cover. **(Image 3-B)**
- 4) Lift the Cable Cover back into the Door until the threaded stud is through the slot. Fasten the Thumb Nut to the stud to secure the Cable Cover to the inside of the Door.

